

User manual

PSAC4G

PYLE
AUDIO

Welcome to the world of PYLE Sports where style and personal audio pleasure intertwine!

PSAC4G, PYLE Sports possesses a high quality of NightVision level of camera lens which can allow you to enjoy fun moment of your action or sport as well as music, photo under water, on the ground or on a bike tour.

 
 
 
Please read carefully the following instructions before use.

Box contents

1. PYLE Sports, PSAC4G MP3/DSC/DVR device
2. Multi-directional clip holder
3. Bicycle handle bar bracket
4. Bicycle holder
5. USB charger cable
6. Waterproof earphone
7. Sport type Hifi earphone with volume control (non waterproof)
8. Waterproof earplug set
9. Neoprene armband

Product diagram

- a. Camera lens
- b. Key switch
- c. Bicycle holder
- d. Bicycle holder release lever
- e. Bicycle handlebar bracket
- f. Reset switch
- g. Microphone
- h. 2.5 mm earphone jack
- i. Multi-directional clip holder
- j. Clip holder Insert hole
- k. Bicycle holder Insert hole
- l. Clip holder insert hole

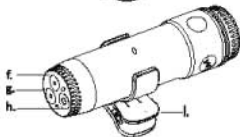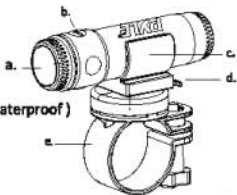

OPERATIONAL INSTRUCTIONS

Mounting to your bicycle

1. Clip on bicycle handlebar bracket and turn screw until tightly secure.
2. Slide PSAC4G into bicycle holder. Be note that a raised point on the clip holder must go into the hole (hole k.) on the PSAC4G .
3. Slide bicycle holder onto bicycle handlebar bracket until it clicks into place.
4. Adjust angle by turning bicycle holder as required.
5. Press key switch button to activate MP3/DSC/DVR.
6. Use normal earphone and insert into the audio jack hole (h.) if listening MP3 is needed.
7. To remove, press bicycle holder release lever and slide forward to detach from the bicycle handlebar bracket.

Attaching to your swimming goggle

 
1. Align the PSAC4G to the hole on the unit and it clicks into place. Be note that a raised point on the clip holder must go into the hole. (hole j. or l. depends on the left or right side you choose to clip.)
2. Clip the PSAC4G to your swimming goggle.
3. Press key switch button to activate MP3/DSC/DVR.
4. Use waterproof earphone and insert into the audio jack hole (h.) if listening MP3 is needed.
5. Adjust angle by turning clip holder as required.

Wearing on your cloth on the go

1. Align the PSAC4G to the hole on the unit and it clicks into place. Be note that a raised point on the clip holder must go into the hole. (hole j. or l. depends on the left or right side you choose to clip.)
2. Clip the PSAC4G to your clothe sleeve or collarlet or waist band.
3. Press key switch button to activate MP3/DSC/DVR.

4. Use normal earphone and insert into the audio jack hole (h.) if listening MP3 is needed.
5. Adjust angle by turning clip holder as required.

Charging and Music Transfer











1. When charging PSAC4G, insert the USB cable into audio jack hole (h.) and connect it to the PC USB port. It is recommended that you leave your MP3 player to charge for minimum of 3 hours (blue & red light will flash during recharging). check when fully recharged, lights will turn off to ensure optimum battery life.

Transferring music to your PSAC4G

2. Insert the USB cable into audio jack hole (h.) and connect it to a PC.
3. The PSAC4G player will appear as a removable drive in 'My Computer'.
4. Select the music files you want to simply drag and drop them onto the PSAC4G player.
5. When you are finished transferring music, right-click on the PSAC4G player's icon and select 'eject'.
6. It is then safe to unplug.

How to operate

MP3 mode

- 1) To switch the PSAC4G player on, press the  button for two seconds till red & blue light goes on, and MP3 music will start playing.
- 2) To switch the PSAC4G player off, press the  button for two seconds till red & blue light goes off.
- 3) While playing music, the blue light will keep flashing, and red light will keep off.
- 4) While playing music, tapping the  or  buttons once will skip a track or replay the previous one.
- 5) While playing music, press and hold the  or  buttons to adjust the volume.
- 6) To make PSAC4G pause while music is playing, short tap  to pause song play. Blue light will start from stable flash and become quick flash, the red light will still keep off. Short tap  again to continue playing. Blue light will return to stable flash, and red light will keep off.

DSC mode

- 7) While In MP3 mode, hold M button down for 2 seconds to change to DSC mode. Blue light will stop and red light will be entire on.
- 8) While In DSC mode, blue light will be off, and red light will be entire on. When pressing any button to take a single photo, blue light will be entire on, and red light will be off.
- 9) The light will resume to blue light off and red light on once the photo taking is finished.

DVR mode

- 10) While in DSC mode, hold M button down for 2 seconds to change to DVR mode. Blue and red light will be entire on.
- 11) While in DVR mode, pressing any button will begin filming. Blue light will be entire on and red light will be flashing.
- 12) While filming, pressing any button will stop the recording. Blue and red light will be entire on.
- 13) While in DVR mode, hold M button down for 2 seconds to change to MP3 mode. MP3 will begin playing music. Blue light is from entire on to flash, red light will keep off.

Be note, under DSC and DVR mode, the system will be turn off in 5 mins when no key activation is detected.

Reset system

- 14) Use paper clip or the like and insert into reset switch until system resets, system will turn off.

Light vs. Function table

	B	R
Power on (2 secs only)	●	●
MP3 mode and playing	◐	○
DSC mode and playing	○	●
DSC shooting	●	○
DVR mode and waiting	●	●
DVR filming	●	◐
Power off	○	○

Blue light=B

Red light=R

Light on=●

Light off=○

Flashing=◐